

Iridium – Voice Mail Service

Setting up your Voice Mail

1. Call from any phone your Iridium phone number (For example: +881641412345)
2. If call is not answered and is forwarded (If call forwarding is setup on handset), you will get a message that your call is being forwarded
3. During the greeting type *
4. You are asked for your PIN (the standard PIN code is the last 7 digits of your phone number) – In this example, the PIN code would be 1412345.
5. Now you are in the user area of the Voice Mail system
6. To modify your Personal Preferences, press 4
7. To modify your password, press 1
8. To record your message, press 3
9. To record your name, press 2
10. Record your message and press #
11. If you are satisfied press # to save, 1 or 3 to listen to the message or re-enter a new message
12. Press ** to go back to the main menu

Your Voice Mail has now been setup

Using your Iridium Voice Mail

Via your Iridium phone:

1. Call +881662990000 (00881662990000)
2. To listen to your messages, press 1

For other options and Voice Mail details, please refer to the Iridium User Guide supplied with your Iridium handset.

Forwarding calls from your ISU (phone) to Voice Mail

1. Press Menu
2. Select Call Related Features
3. Toggle (using < > buttons) to Call Forwarding
4. Toggle (using < > buttons) to Detailed Forwarding
5. Select “Forward if Unavailable” (press OK)
6. Select View Options (press OK)
7. a) If ON, press OK
b) if OFF, (using < > buttons) to ON, press OK
8. You will be prompted where you want your calls forwarded to. In this case, select Voice Mail (press OK). A message will appear confirming that call forwarding is on. You must enter a Voice Mail number into the unit (see below)
9. Press Clear

Repeat steps 6-9 for “Forward if busy” and “Forward if unreachable” (sub menus of “Detailed Call Forwarding”)

Message Settings – Storing your Voice Mail number

1. Press Menu
2. Select Messages
3. Toggle (using < > buttons) to Message Settings
4. Toggle (using < > buttons) to Voice Mail Number (press OK)
5. View your current Voice Mail Number (your Voice Mail number should be 00881662990000)
6. If your Voice Mail number is not 00881662990000, you must enter this number in by selecting “Enter Voice Mail Number”
7. Exit the Menu