

## Iridium OpenPort Firmware Upgrade Instructions

1. Download the firmware and double click the program.
2. Make sure that the BDU (Below Deck Unit) and ADU (Above Deck Unit) are connected.
3. Connect a straight through Ethernet cable between the BDU and the PC.
4. Check that the IP address matches the units IP address, most common address is 192.168.0.1
5. Click the Upgrade button to start the upgrade process.

